

 
Tire Service Equipment

Branick[®]
INDUSTRIES, Inc.

Model TC Tire Cart

***Keep Rolling...
Even with a
full load of tires!***

Branick's unique design lets you stack tires close together to get maximum use of your storage space...and the TC now handles 20" thru 37" outside diameter tires.

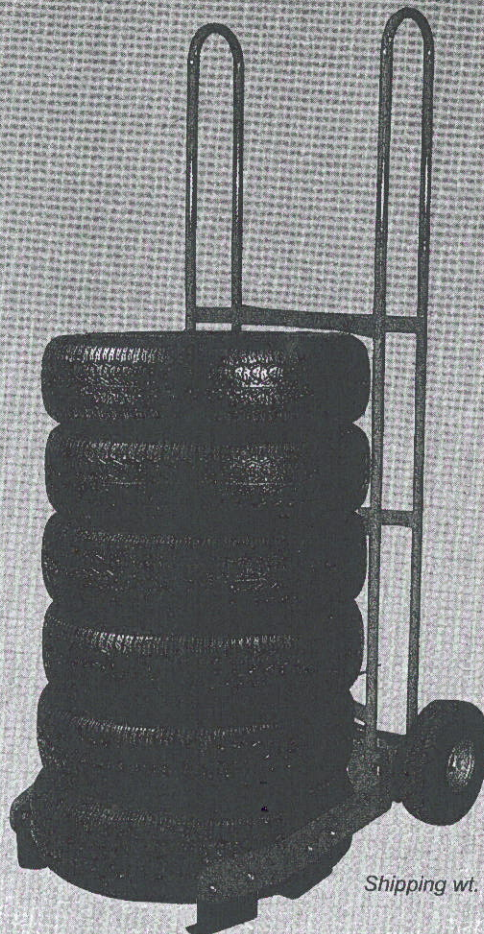

Shipping wt. 92 lbs.

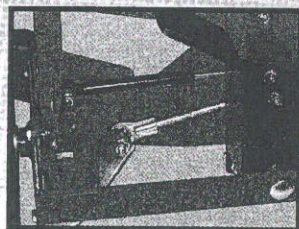


Figure 1

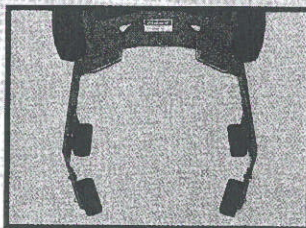


Figure 2

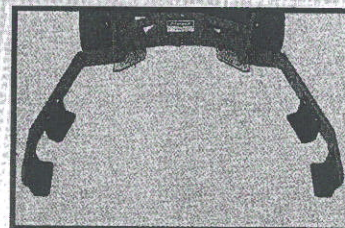


Figure 3

Branick Tire Carts feature a gas spring (figure 1) that automatically closes the arms that grip the tires, and then applies direct pressure to the tires to keep them there. All you have to do is push down on the pedal, slide the cart into the stack of tires, and release the pedal. Arms close to 20", (figure 2) and open to 37" (figure 3).

Branick[®]
INDUSTRIES, Inc.

Visit our web site at www.branick.com

Branick Canada LTD
1132 Elias Street, Unit #2
London Ontario
Canada N5W 3P6
Phone 519-452-1935
FAX 519-452-3911

 
Branick Industries, Inc.
4245 Main Ave.
Fargo, ND 58103
Phone 701-281-8888
FAX 701-281-5900
0102-168

Branick®

INDUSTRIES, Inc.


MODEL TC Tire Cart

Repair Parts Information

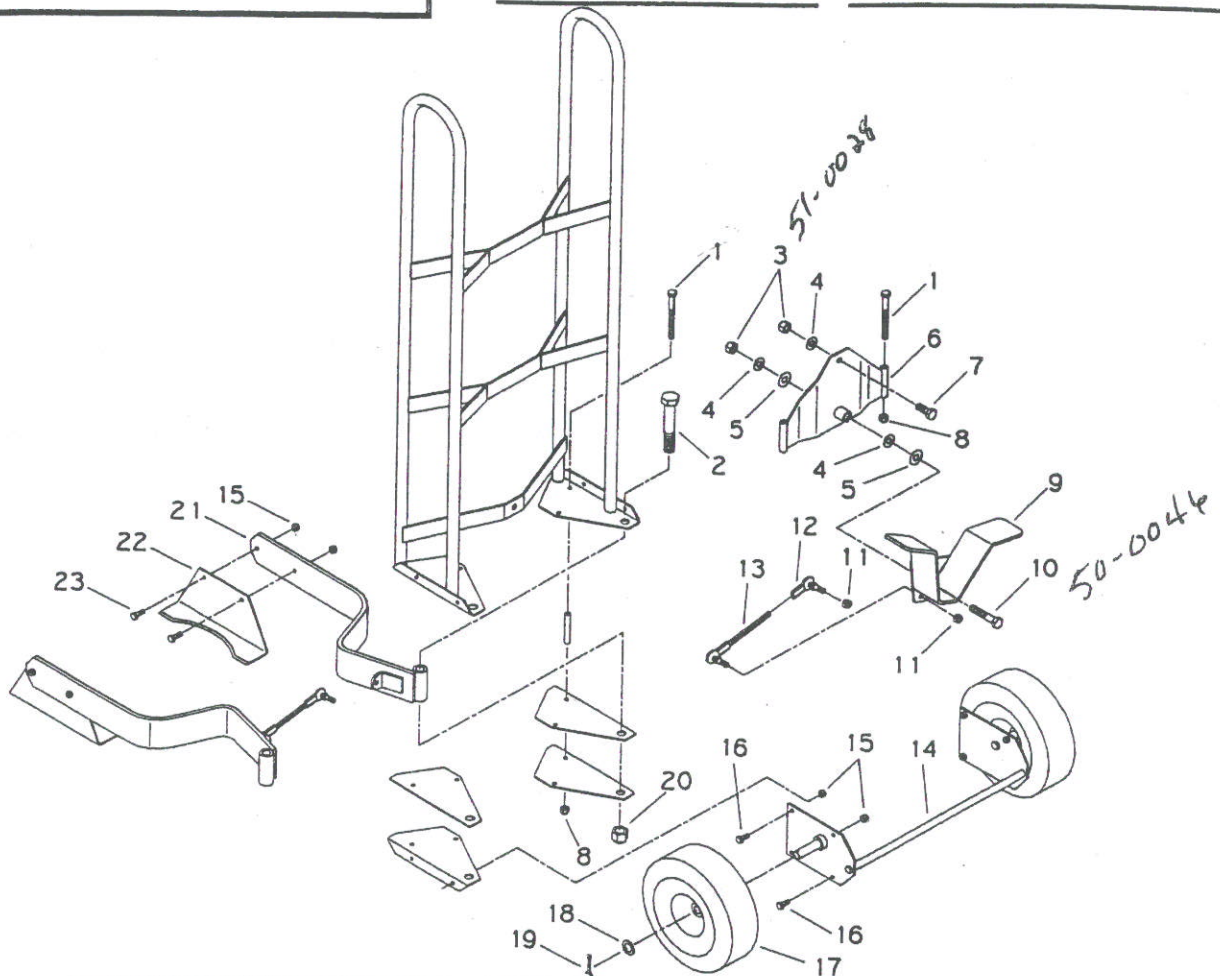

ITEM	PART NO	QTY	DESCRIPTION
1	028-341	4	3/8-16 X 4 Hex Head Cap Screw
2	028-335	2	3/4-10 X 4-1/2 Hex Head Cap Screw
3	055-156	2	1/2-13 Nylon Hex Lock Nut
4	108-044	3	1/2 SAE Flat Washer
5	108-144	2	1/2 Nylon Washer
6	03-0190	1	Support Plate
7	028-034	1	1/2-13 X 1-1/4 Hex Head Cap Screw
8	055-154	4	3/8-16 Nylon Hex Lock Nut
9	03-0189	1	Pedal
10	028-089	1	1/2-13 X 2-1/2 Hex Head Cap Screw
11	055-098	4	3/8-24 Hex Lock Nut
12	107-093	4	Rod End
13	149-315	2	Threaded Rod
14	878-033	1	Wheel Bracket
15	055-145	12	5/16-18 Nylon Hex Lock Nut
16	028-012	8	5/16-18 X 3/4 Hex Head Cap Screw
17	106-016	2	Wheel
18	039-002	2	3/4 Machine Bushing
19	061-023	2	1/8 X 1 Cotter Pin
20	055-157	2	3/4-10 Nylon Hex Lock Nut
21	03-0188	2	Arm
22	72-0075	2	Tire Rest
23	028-060	4	5/16-18 X 7/8 Hex Head Cap Screw

 51-0022

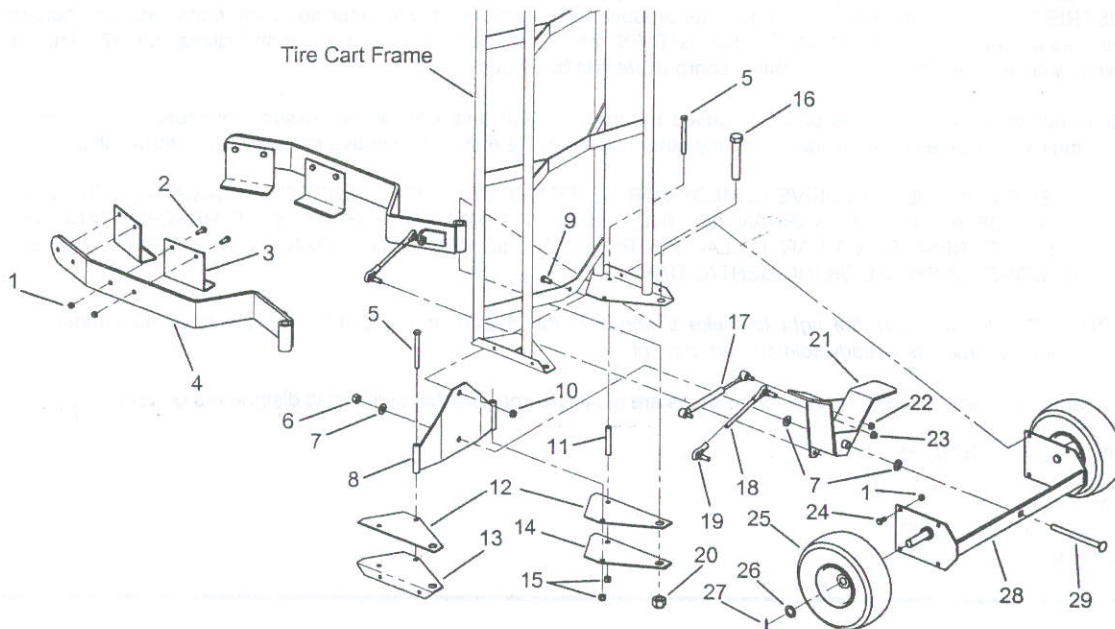


ITEM	PART NO	QTY	DESCRIPTION
1	055-145	16	5/16-18 Nylon Hex Lock Nut
2	028-060	8	5/16-18 X 7/8 Hex Head Cap Screw
3	72-0108	4	Tire Rest
4	03-0337	2	Arm
5	028-341	4	3/8-16 X 4 Hex Head Cap Screw
6	055-058	1	1/2-13 By-Way Hex Lock Nut
7	108-044	3	1/2 SAE Flat Washer
8	03-0338	1	Support Plate
9	028-133	1	3/8-16 X 3/4 Hex Head Cap Screw
10	055-103	1	3/8-16 Serrated Flange Hex Lock Nut
11	268-494	2	Spacer Tube
12	046-072	4	Arm Pad
13	111-468	1	Arm Bracket - Left
14	111-469	1	Arm Bracket - Right
15	055-154	4	3/8-16 Nylon Hex Lock Nut
16	028-335	2	3/4-10 X 4-1/2 Hex Head Cap Screw
17	01-0203	1	Gas Spring
18	149-315	2	Threaded Rod
19	107-093	4	Rod End
20	055-157	2	3/4-10 Nylon Hex Lock Nut
21	03-0339	1	Pedal
22	055-105	2	5/16-18 Serrated Flange Hex Lock Nut
23	51-0022	4	3/8-24 Serrated Flange Hex Lock Nut
24	028-012	8	5/16-18 X 3/4 Hex Head Cap Screw
25	106-016	2	Wheel
26	039-002	2	3/4 Machine Bushing
27	061-023	2	1/8 X 1 Cotter Pin
28	878-033	1	Wheel Bracket
29	50-0100	1	1/2-13 X 6-1/2 Carriage Bolt

Branick

Tire Handling Equipment

 Repair Parts Tire Cart MODEL TC

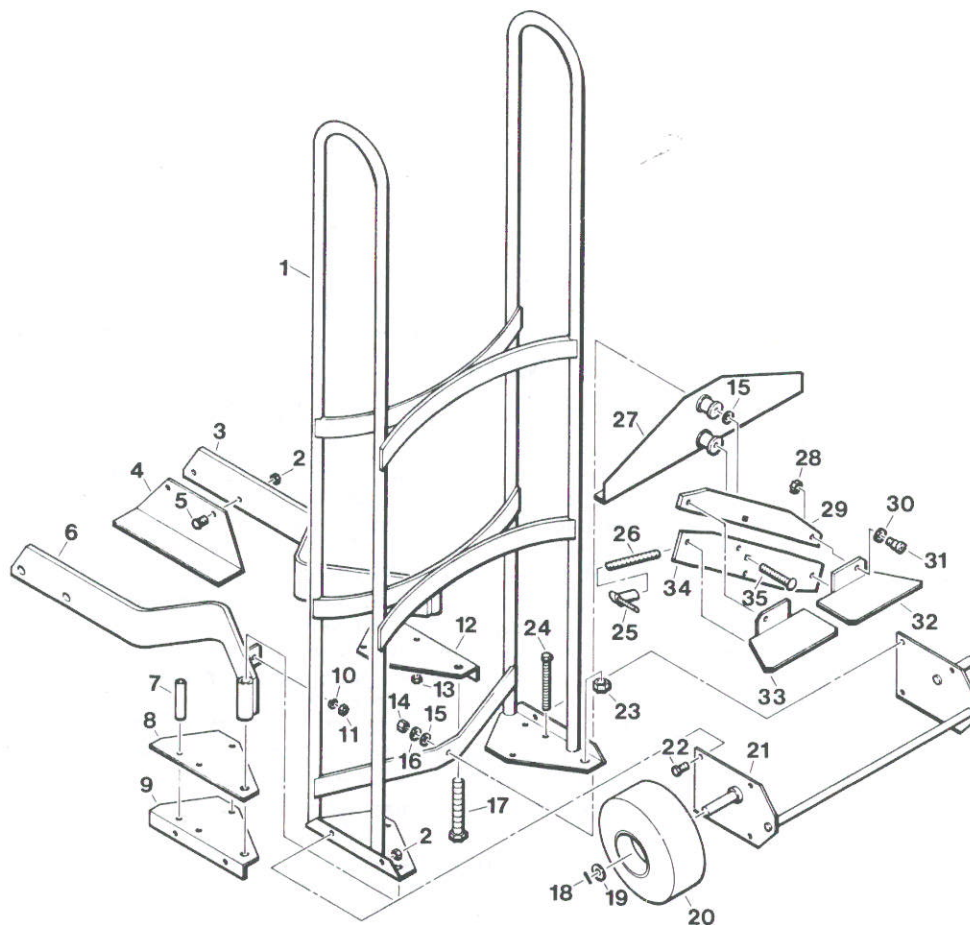

ITEM NO.	PART NO.	NO. REQ'D	DESCRIPTION	ITEM NO.	PART NO.	NO. REQ'D	DESCRIPTION
1	79.834	1	Frame	19	2.039	2	Machine bushing
2	145.055	12	Nut	20	16.106	2	Wheel
3	44.804	1	Arm	21	33.878	1	Wheel bracket
4	69.267	2	Tire rest	22	12.028	8	Capscrew
5	337.028	4	Capscrew	23	157.055	2	Nut
6	45.804	1	Arm	24	338.028	6	Capscrew
7	494.268	6	Tube	25	93.107	4	Tie rod
8	72.046	2	Arm pad	26	315.149	2	Threaded rod
9	468.111	1	Arm bracket	27	28.836	1	Guide
10	14.108	4	Lockwasher	28	23.055	2	Nut
11	90.055	4	Nut	29	64.062	1	Link
12	469.111	1	Arm bracket	30	126.108	4	Washer
13	154.055	6	Nut	31	197.028	4	Shoulder bolt
14	156.055	2	Nut	32	7.851	1	Pedal
15	9.108	4	Fiber washer	33	6.851	1	Pedal
16	44.108	2	Washer	34	65.062	1	Link
17	335.028	2	Bolt	35	334.028	2	Bolt
18	23.061	2	Cotter pin				

BRANICK INDUSTRIES, INC.
Box 1937
2600 3rd Avenue North
Fargo, North Dakota 58102